



MODEL K-3754

DIGITAL INDICATOR & CONTROLLER for RTD Pt-100 INPUT

OPERATION

AND

INSTRUCTION MANUAL



Switzer Instrument Limited

Regd. Off: 29 (Old# 14), Thanikachalam Road, P.B.No.1423, Chennai 600 017

Internet web-site
www.switzerinstrument.com

Sales – Head Office

17 (Old# 9), South Boag Road, Chennai 600 017

Ph : 044-24340999 / 24343956 / 24344321

Fax : 044-24347887 e-mail : sales@switzerinstrument.com

Works

127 Sidco Estates, Chennai 600 098

Ph : 044-26242244 / 26242255 / 26243355

Fax : 044-26248849 e-mail : works@switzerinstrument.com

INTRODUCTION

Model K-3754 temperature instruments are designed and manufactured using the latest state of the art technology. The instruments are versatile, compact, easy to install and have wide options to suit customer requirements.

This model accepts RTD Pt-100 as its input to display the process temperature. The RTD can be of either 3-wire or 4-wire type.

A 3½ digit 14.2mm LED display provides the readout to ±1999 counts. Also provides either a single or double set point relay output. This set point control can be used for Alarm function with narrow dead band or control purposes with wider dead band.


The instrument incorporates a SMPS circuitry for universal mains operation from 90 to 250V AC. The indicator is housed in panel mounted enclosure with size of 96x48mm bezel.

INSTALLATION INSTRUCTIONS

The instrument is designed to fit into a standard panel cutout measuring 91 mm x 43 mm (+0.75mm -0.0)

- The front window should be gently levered from the instrument by using the notch at bottom of the lens.
- Insert the instrument through the cutout from the panel front.
- Once the instrument has been positioned in the cutout, it is securely fitted by tightening the two front facing clamp screws in a clockwise direction.
- Replace the display window by positioning against the window stops on the front and simply pushing into place.

Fig-1: Panel locking arrangement

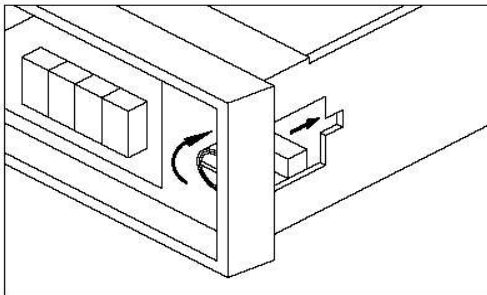

OVERALL DIMENSIONS

Fig-2: Front

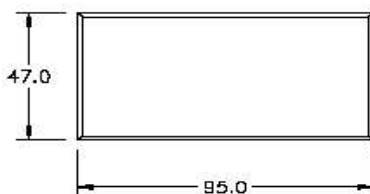


Fig-3: Side


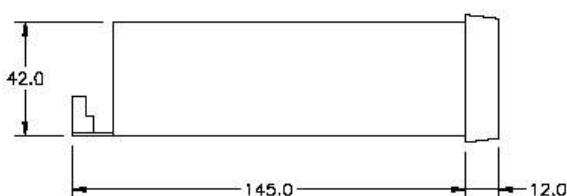



Fig-4: Top

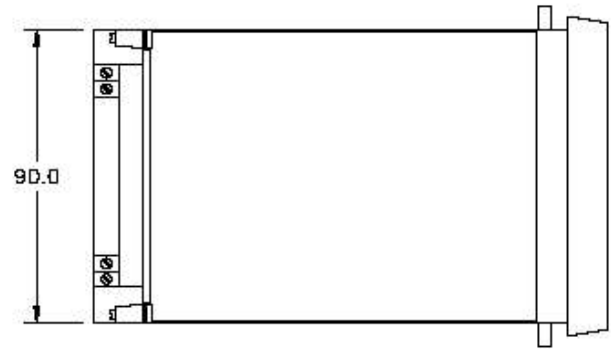

WIRING INSTRUCTION

Terminals for electrical connection are located on the rear of the instrument. These are of screw clamp type to accept 2.5mm² wires maximum either single or multi strand.

Fig-5: Wiring details – Instrument rear view

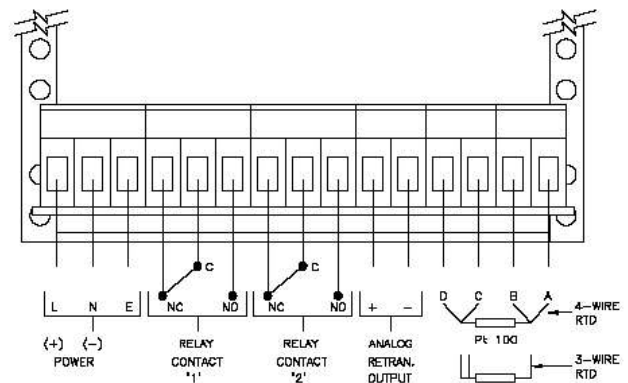

CALIBRATION PROCEDURE

Equipment Required

1. 3½ digit multimeter with current range of 20 mA.
2. Resistance decade box 1K ohms with an accuracy of 0.1% or better

Procedure

1. Remove top cover and front red filter to access Zero, Span and set point adjustments.

Display Calibration – Zero Adjustment

1. Connect appropriate power supply to the power terminals.
2. Connect decade resistance box with 4-wires to the sensor terminals of the instrument.
3. Set 100 Ω in the decade resistance box.
4. Adjust Zero pot for a reading of 000 for 1°C resolution or 00.0 for 0.1°C resolution.

Display Calibration - Span Adjustment

0.1°C resolution – Range (-)150.0°C to (+)199.9°C

1. Set 170.31 Ω corresponding to 185°C in the decade resistance box.
2. Adjust Span pot for a reading of 185°C on the display.
3. Check intermediate values.
4. This completes calibration for 0.1°C resolution.

1°C resolution – Range (-)150°C to (+)800°C

1. Set 375.51 Ω corresponding to 800°C in the decade resistance box.

- Adjust Span pot for a reading of 799°C on the display.
- Check intermediate values.
- This completes calibration for 1°C resolution.

ALARM SETTING

(A) Set point and Dead band Adjustment for Single Set point option.

Dead band adjustment is applicable for single set point only. The location of potentiometers are given in Fig-6 & 7. Refer following table for jumper selection.

Table-2: High Alarm – Set Jumper J1 to H

Signal Status	Relay operating mode – Jumper J2	
	1 - Failsafe	2 - Normal
PV < SP	Relay ON	Relay OFF
PV > SP	Relay OFF	Relay ON

Table-3: Low Alarm – Set Jumper J1 to L

Signal Status	Relay operating mode – Jumper J2	
	1 -Normal	2 - Failsafe
PV > SP	Relay OFF	Relay ON
PV < SP	Relay ON	Relay OFF

- Select the required alarm and relay mode operations by J1 and J2. Refer above table for details.
- Press the set point switch and adjust set point pot for the required set point.

High – Normal: J1-H, J2-2

- Turn offset and dead band pots fully counter clockwise. Relay will be OFF.
- Bring the process variable to the set point.
- Turn offset pot clockwise till the relay just comes ON.
- Turn dead band pot fully clockwise. Relay will remain ON.
- Bring the process variable to the nearest dead band below the set point.
- Adjust dead band pot counter clockwise till the relay just goes OFF.
- Check the operation of relay at the set point and below the set point (equal to dead band).

High – Failsafe: J1-H, J2-1

The setting procedure is identical to High – Normal, except that the relay status is just opposite to the above status.

Low – Normal: J1-L, J2-1

- Turn offset and dead band pots fully counter clockwise. Relay will be ON.
- Bring the process variable to the set point.
- Turn offset pot clockwise till the relay goes OFF and trim it slowly counter clockwise to just make the relay ON.
- Turn dead band pot fully clockwise. Relay will remain ON.
- Bring the process variable to the nearest dead band above the set point.
- Adjust dead band pot counter clockwise till the relay just goes OFF.
- Check the operation of relay at the set point and above the set point (equal to dead band).

Low – Failsafe: J1-L, J2-2

The setting procedure is identical to Low – Normal, except that the relay status is just opposite to the above status.

(B) Set point and Dead band Adjustment for Dual Set point option.

This option provides a fixed setting about 2 to 5 counts. These are not field adjustable and are factory set. For set point selection and adjustment refer to Fig-6 & 7.

For dual set point option, Relay mode will be normal only. Failsafe mode is not available.

High Alarm

Relay energizes when process value goes above set point.

Low Alarm

Relay energizes when process value goes below set point.

Table-4: Set point selection table for Dual set point option


Set point 1 Switch	Set point 2 Switch	Displayed value
Pressed	Pressed	Process value
Released	Pressed	Set point 1
Pressed	Released	Set point 2
Released	Released	Set point 1

ANALOG OUTPUT (OPTIONAL)

Connect multimeter to Analog Retransmission output terminal indicated in Fig-5. Calibration procedure is provided for 4-20 mA retransmission output.

- Set the required resistance input corresponding to the Zero value of the retransmission range.
- Adjust Zero (4mA) pot for an output current of 4mA measured at the external output terminals.
- Set the required resistance input corresponding to the Span value of the retransmission range.
- Adjust Span pot (20mA) pot for an output current of 20mA measured at the external output terminals.
- Check for linearity at intermediate values, if non linear, repeat steps 1 to 4.

Fig-6: Internal front view

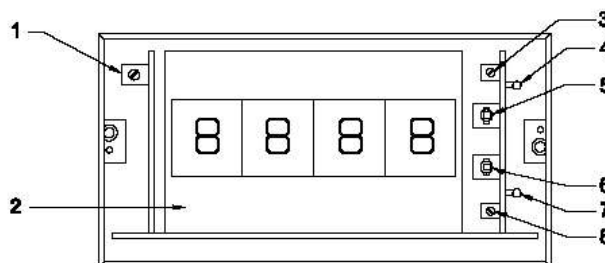


Part Identification – Internal front view

- Display – ZERO adjust
- Display board
- Set point-1 adjust
- Alarm LED for Set point-1
- Set point-1 Selection Switch
- Set point-2 Selection Switch
- Alarm LED for Set point-2
- Set point-2 adjust

Note: For Single Set point option only the Set point-1 elements (Parts 3, 4 & 5) are present.

Fig-7: Internal top view

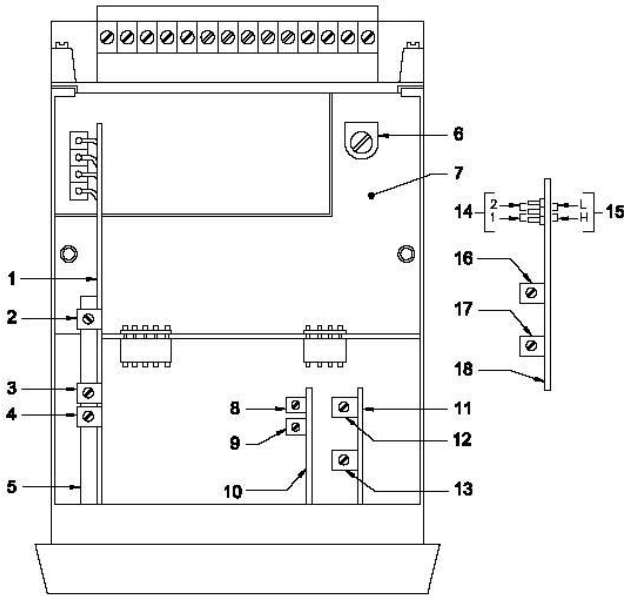

Part Identification – Internal top view

1. Input Signal conditioner board
2. Cable Balance adjust. **FACTORY SET. DO NOT ADJUST.**
3. SPAN adjust
4. Offset adjust for display calibration. *(Present only for 0.1°C resolution. This is NOT present for 1°C resolution.)*
5. A/D Converter board
6. Fuse holder
7. Power Supply board
8. Analog output – ZERO adjust
9. Analog output – SPAN adjust
10. Analog output board – Optional
11. Control board – Dual Set point
12. Dead band -1 adjust
13. Dead band-2 adjust
14. J2 relay mode selection
15. J1 Alarm mode selection. *(Located beneath J2).*
16. Dead band adjust
17. Offset adjust for control function adjust
18. Control board – Single Set point. *(This board is present in place of Dual Set point board for Control Output option which calls for Single Set point. This is Part-11 in the above figure).*

TECHNICAL SPECIFICATIONS

ELECTRICAL

Input	RTD Pt-100
Range	
For 1°C resolution	(-)150°C to (+)800°C
For 0.1°C resolution	(-)150.0°C to (+)199.9°C
Accuracy	
For 1°C resolution	±0.2% of reading ±1 count
For 0.1°C resolution	±0.3°C
Input Impedance	30MΩ typical
Sensor operation mode	4-wire constant current. Can also be configured to use 3-wire RTD. Refer to connection methods in Fig-5 of this manual
Resolution	0.1°C or 1°C
Display	3½ digit LED, 7 segment, with Character size of 14.2mm
Power Supply	90 to 250V AC; 100 to 300V DC; 18 to 32V DC
Power Consumption	3VA
Alarm Outputs	1 or 2 set point; 1 SPDT changeover relay contact rated at 5A 230VAC / 28VDC (res) for each set point
Dead band	
For 1 set point	Adjustable from 2 to 20 counts
For 2 set point	Fixed at 2 or 3 counts
Analog Output Current output	4-20mA, 0-20mA with accuracy of 0.2% of span; max load of 750Ω
Voltage output	1-5VDC, 0-5VDC with accuracy of 0.2% of span
Electrical Connection	PCB mount Screw clamp terminals
MECHANICAL	
Enclosure	Engineering plastic suitable for flush panel mounting
Overall dimensions	95(W) x 47(H) x 157(L) mm
Panel Cutout	91 x 43 mm (+0.75, -0.00 mm)
Depth behind panel	145 mm
TEMPERATURE LIMITS	
Ambient	0°C to 50°C
Relative Humidity	Max. of 95% RH, non-condensing